



CUSTOMER FLOOR MEASURING GUIDE

How to Measure Your Room for New Flooring

Bring the right measurements with you — and we'll do the rest!


MEASURE THE LENGTH & WIDTH

- Use a tape measure (ideally in metres and centimetres)
- Measure the longest part of the room
- Then measure the widest part, including into any alcoves or recesses
- Top tip: Measure at floor level, not waist height

ADD A LITTLE EXTRA

- Always add 10cm (approx. 4 inches) to each measurement to allow for fitting and trimming
- Round up to the nearest 0.5 metre for a better estimate

Note: Hallways should be measured the same way as rooms.

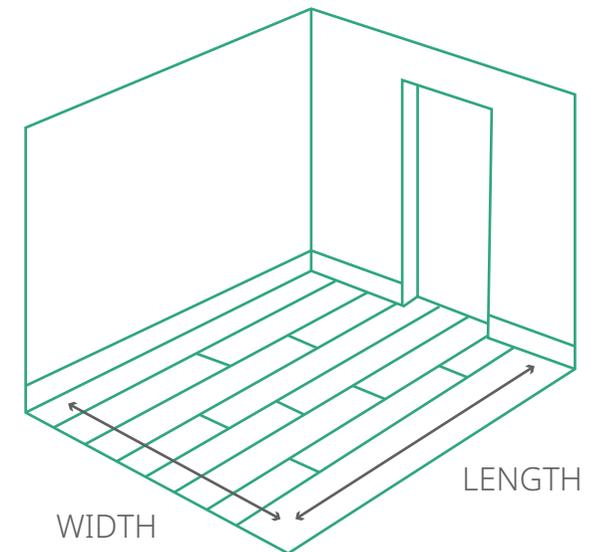


NOTE ANY IRREGULAR SHAPES

- For L-shaped or irregular rooms, break it into simple rectangles
- Measure each section's length and width separately
- Don't worry about total area – just bring us the numbers and we'll calculate everything for you

BRING YOUR MEASUREMENTS TO THE STORE

- Our expert team will guide you on the best flooring options, underlay and fitting
- Write your measurements down or take a photo on your phone

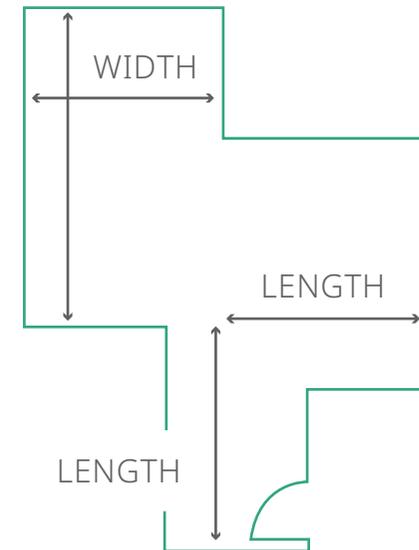

How to Measure stairs

MEASURE THE TREAD AND RISER

For each step, measure:

- Tread (the part you stand on): front edge to back edge
- Riser (the vertical face): top to bottom

Step measurement = tread + riser


COUNT THE NUMBER OF STEPS

- Count the total number of risers/steps to be covered.
- Total stair length = (tread + riser) × number of steps

INCLUDE LANDINGS

If you're carpeting the landing(s), measure each landing separately:

- Length × width
- Add this to your total.

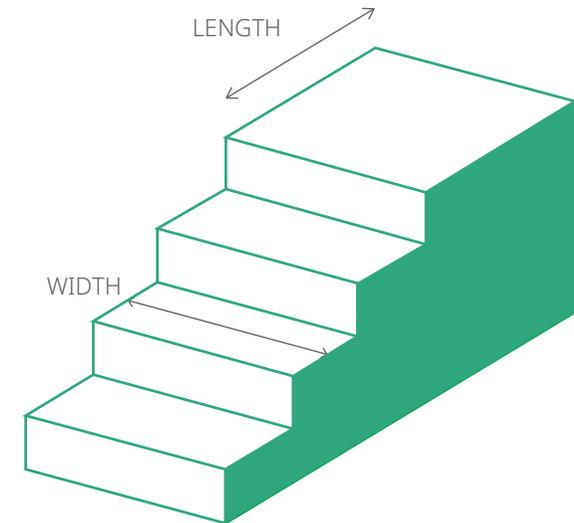



W2WFLOORING.CO.UK